




**2009 TO 2016
TOURING**

**WITH BAKER OIL PAN, CENTERSTANDS,
OR TRU-TRACK**

BudsBikerPartsInc.

**3302 Airport Rd.
Helena, MT 59601
406.457.2458**


**info@harleyoilcoolers.com
<https://www.harleyoilcoolers.com>**

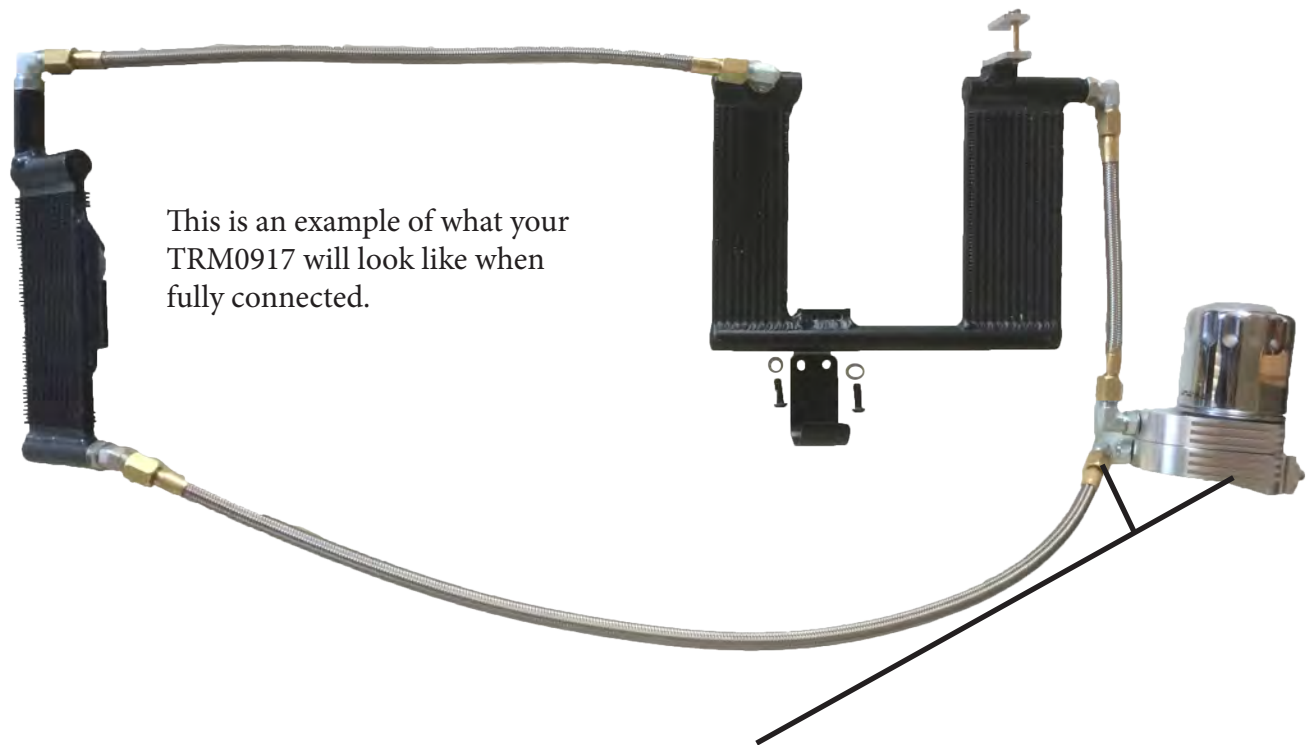

This is an example of what your TRM0917 will look like when fully connected.

Attach hose to inside half of adaptor as instructed in "STEP 3". Continue installation and feeding of hose as show up through "STEP 7". Follow ALTERNATE STEPS based on model as stated "7a for 2009 and 7b 2010 up".

When hanging the front Modified Element make sure to attach both frame brackets supplied. "L", is already covered in "7b". "R" is for the modified only.

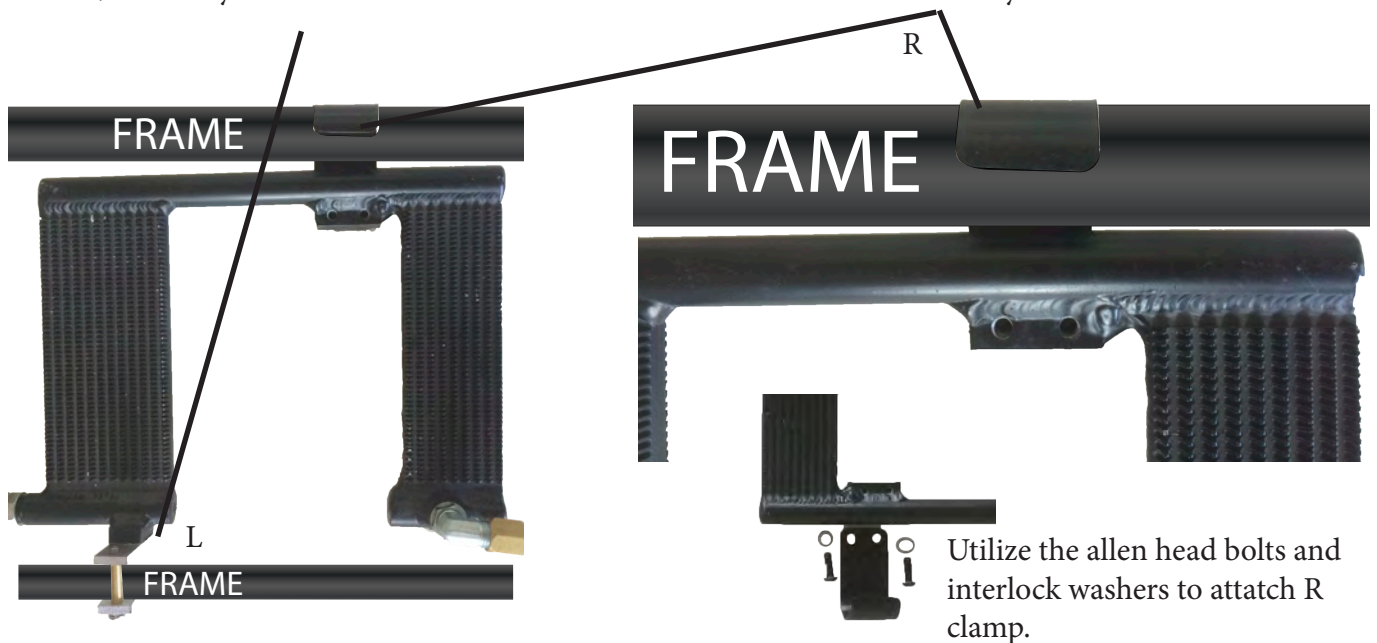

Adjust front element until it has sufficient clearances and does not rub against surrounding. Tighten brackets to keep support intact.

REAR ELEMENT:

Remove bolts that attach rear exhaust crossover.

Connect hoses to rear element and keep loose until mounted. Slide rear element up and lineup with bolt holes on crossover. Use the bolts to mount element in place. (about 20% angle)



* Note that step “7c” is not in this application. The rear element clamp will not be necessary.

Mount outside adaptor and feed hoses as stated in “STEP 9” to “STEP 10”.



Follow “STEP 11” by going around and tightening all fittings, checking mounting clamps, and final check mounting of rear element with exhaust crossover.